


COUGAR & THUNDERBIRD

COMPONENT LOCATOR:

A/C COMP CLUTCH (2.3L)	E 36
A/C HTR SW (MANUAL A/C)	D 33-34
ALARM RLY	D 47
ALTERNATOR 2.3L	B 4
ALTERNATOR 3.8 & 5.0L	C 4
ANALOG INST CLSTR	C-E 44
ANTI-THEFT MOD	D 51
AUTO LAMP RLY	D-F 18-19
BATTERY	A 1
BACK-UP/NEUTRAL START	F 37
SWITCH (A/T)	F 37
BACK-UP SWITCH (M/T)	F 37
BRAKE FLUID LVL SW	B 28
CLOCK	D 49
CLSTR ILLUM RLY	D-E 42
CLUTCH CYCLING PRES	
SWITCH (AUTO A/C)	C 35
CLUTCH SWITCH	A 3
CORNERING LT RLY	D-E 37
CRUISE CTRL AMP	F 28-29
DIGITAL INST CLSTR	A-E 46-47
DISTRIBUTOR (2.3L)	D 4
DISTRIBUTOR (3.8L)	E 4
DISTRIBUTOR (5.0L)	F 4
DIR/HAZ FLASHER	C 21
DOOR SWITCHES	F 50-51
DRIVERS SEAT CTRL SW	D-F 56
DRIVERS SEAT CTRL	
SWITCH (MEMORY)	D-F 52
DRIVERS SEAT MEMORY	
MOD	F 53-54
ELECT CTRL ASSY (2.3L)	A-E 4-5
ELECT CTRL ASSY (3.8L)	A-E 9-10
ELECT CTRL ASSY (5.0L)	A-E 14
FILLER DOOR RELEASE	
SWITCH	E 58
FLASH-TO-PASS RLY	F 38
FOG LAMP SWITCH	D 37
FUSE BLOCK	C-D 28-31
GAUGE CLSTR	A 37-42
HARD SHOCK RLY	C 32
HEADLT DIMMER RLY	F 20
HEATED SEAT RLY	B 51
HI-LO BEAM PHOTOCELL AMP	F 19
HORN RLY	D-E 30
HYD PUMP MTR RLY	A 27
IGNITION COIL	A 19-23
ILLUMINATION ENTRY TIMER	A 51
INTERIOR LTS	E-F 45-50
INTERVAL WIPER/WSHR	D-F 25-28
KEYLESS ENTRY MOD	A 48-50
LAMP OUT MOD	D-E 32
LOW OIL LVL RLY	C 38
LOW WSHR FLUID	
LVL SWITCH	E 23
MAIN LIGHT SWITCH	F 22-23
MAIN PWR RLY	B 28
MULTI-FUNCTION SWITCH	D-E 38-39
PASSENGERS SEAT	
CTRL SWITCH	A-C 56-57
PROGRAMMED RIDE CTRL	
DIMMER RLY	C 28
PROGRAMMED RIDE CTRL	
MODULE	A 28-32
PWR ANTENNA SWITCH	E-F 56-57
PWR MIRROR SWITCH	D 52
PWR WINDOW SWITCH	C 56
RADIO ILLUM RLY	D 42
REAR DEFOG CTRL (W/EATC)	F 51
REAR DEFOG CTRL	
(W/O EATC)	D-E 61
STARTER INTERRUPT RLY	C 51-52
STARTER RLY	A 2
STEERING SENS	C 28
SUNROOF SWITCH	A 53
TRUNK RELEASE SWITCH	D 57
WARNING CHIME	F 31-32
W/SHIELD WIPER/WSHR	D-F 23-25
WOT A/C CUTOFF RLY	
(AUTO A/C)	C 37
WOT A/C CUTOFF RLY	
(MANUAL A/C)	F 34-35

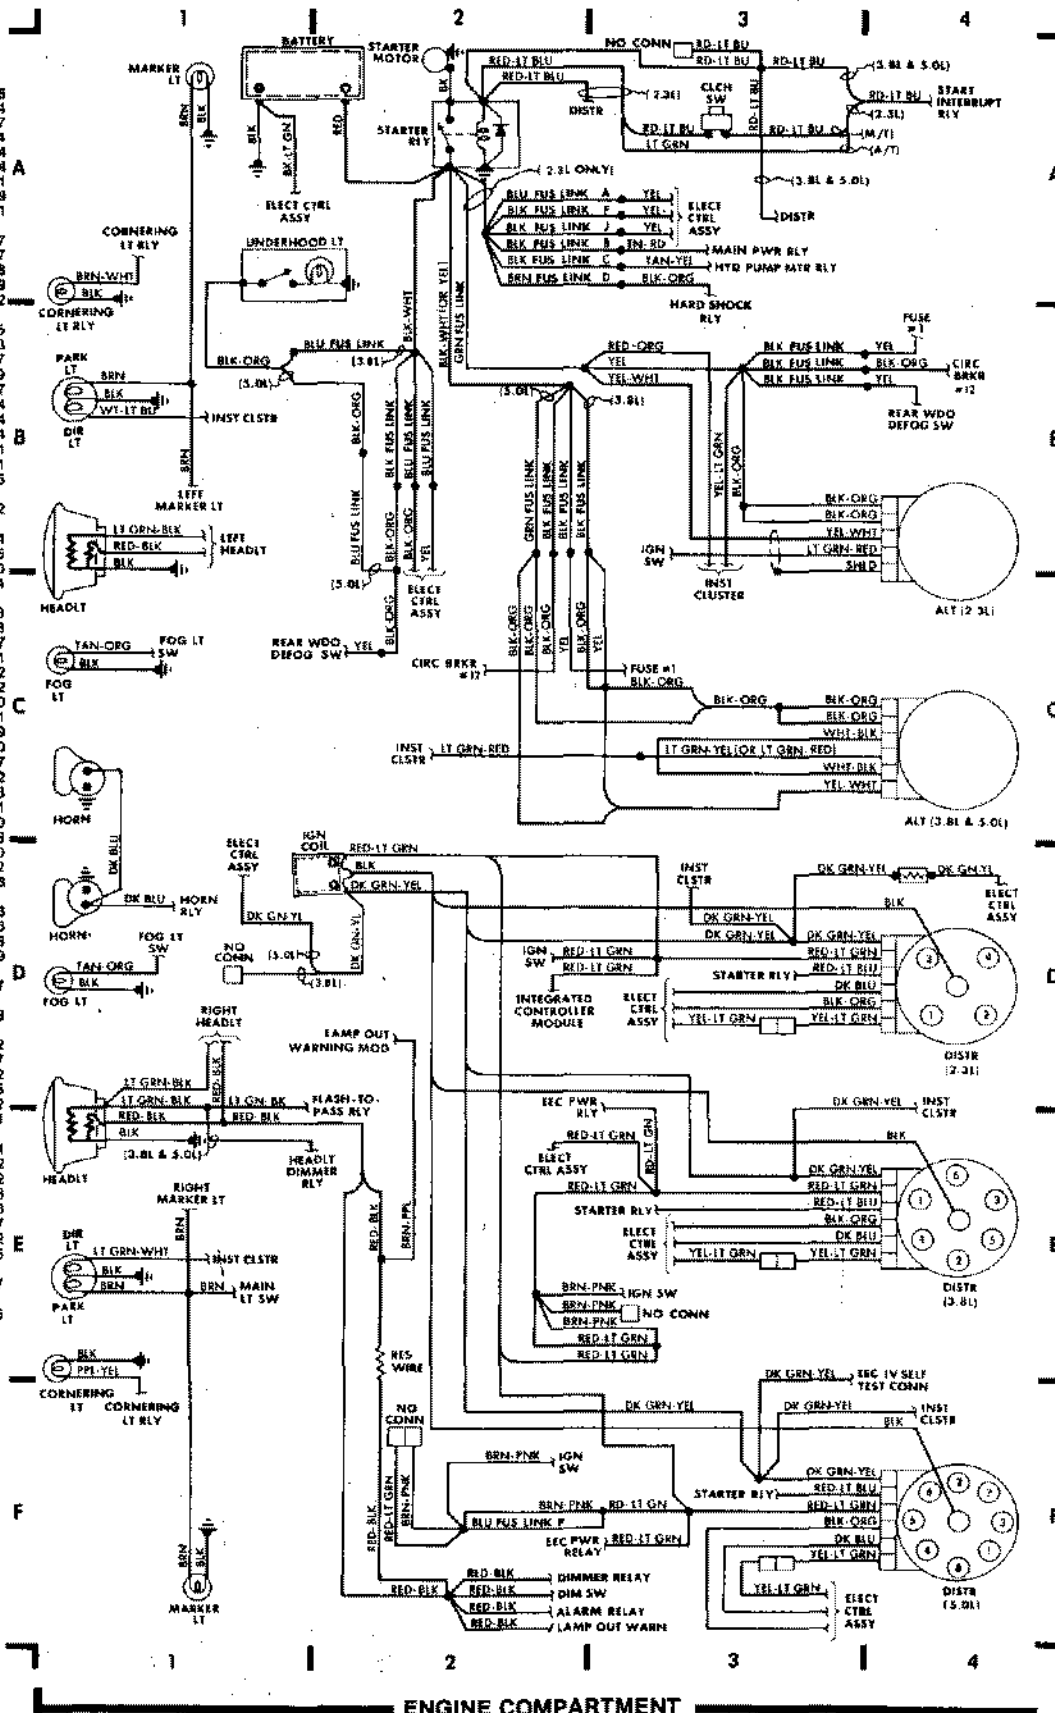

ENGINE COMPARTMENT

